


Distributed By
King Richard Co.
&
SnapFastener.Com

INSTRUCTIONS FOR SETTING #K-230 SNAPS

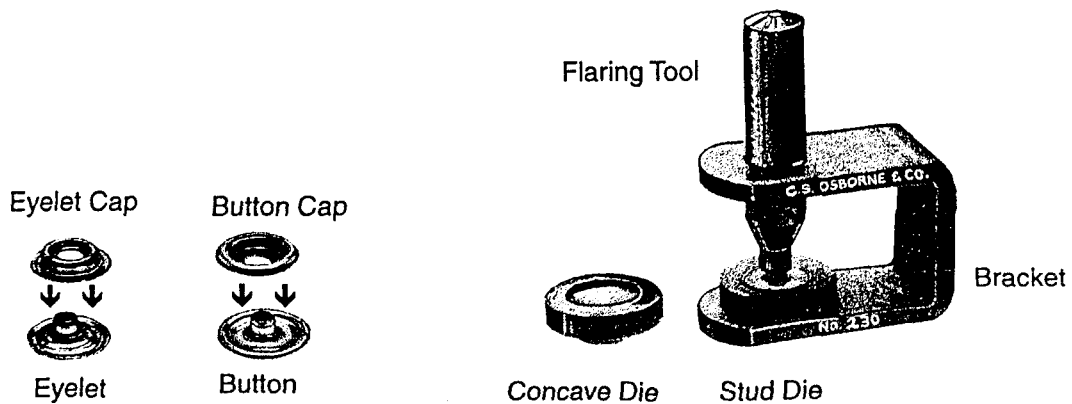

- Punch hole in material large enough to push the tube of eyelet or button through material.
 “To set eyelet and eyelet cap”.
Place stud die in small hole of bracket and the flaring tool in larger hole.
 Place eyelet on die.
Set material and eyelet cap over material.
 Tap flaring tool with mallet.
Using concave die, follow same procedure to set button and button cap.